



Parts to fit Midmark® • Ritter® Tables & Chairs Series 100, 300 & 400

Table with columns for OEM Part #, RPI Part #, Description, and columns for table models 100 through 75. Rows list various parts like cylinder kits, hoses, switches, and relays.

Click here to view Chart of RPI Parts to fit Midmark® • Ritter® Evolution 75 Series

See Footnotes 1-72 on page 2

The above parts are manufactured by Replacement Parts Industries, Inc. to fit Midmark®Ritter equipment. All product names used in this document are trademarks or registered trademarks of their respective holders. 07/10



Parts to fit Midmark® • Ritter® Tables & Chairs Series 100, 300 & 400

Footnotes (continued from page 1)

- 1 - Fits all Serial #
- 2 - From Serial # 19053, G-1000, H-1000, CF-1000, CG-1000 thru present
- 3 - From Serial # G-1325, H-1020, V-1000, CA-1000, CF-1000 and CG-1000 thru present.
- 4 - From G-1325 thru present, H-1020 thru present, CF-1000, CG-1000, CA-1000 thru present.
- 5 - From Serial # G-1000 thru G-1324 and H-1000 thru H-1019
- 6 - Prior to Serial # 14536.
- 7 - From Serial # 14536 and above; G-1000 thru present, H-1000 thru present, CF-1000 thru CF-1322, CG-1000 thru CG-1029
- 8 - Prior to Serial # 37940.
- 9 - From Serial # 37940 thru present; J-1000 thru J-1049.
- 10 - From Serial #'s prior to 37940 thru present; J-1000 thru present, CC-1000 thru CC-1568
- 11 - Prior to Serial # 37940, J-1476 thru present and CC-1000 thru present.
- 12 - From Serial # 37941 thru present and J-1000 thru J-1475.
- 13 - From Serial # J-1050 thru present; CC-1000 thru CC-1568.
- 14 - From Serial # 37940 thru present; J1000 and CC1000 thru present.
- 15 - Back cylinder all Serial #'s prior to 37420 and all K Serial #'s, BX-1000 thru BX-1739, CA-1000 thru CA-1220. Foot cylinder all Serial #'s.
- 16 - Prior to Serial # 37420.
- 17 - Prior to Serial # 37420 thru K-2725.
- 18 - From Serial # 37420 thru K-2725.
- 19 - Prior to Serial # 37420; K-5010 to present.
- 20 - From Serial # 37420 thru K-5009; BX-1000 thru present.
- 21 - From Serial # K-2726 thru present; BX-1000, CA-1000 thru present.
- 22 - From Serial # K-2726 thru present; from BX-1000 thru BX-2310; CA-1000 thru CA-1506.
- 23 - From Serial # K-2726 thru K-8178; from BX-1740 thru present, CA-1221 thru present.
- 24 - From Serial # K-8179 thru present; from BX-1000 thru BX-1739, CA-1000 thru CA-1220
- 25 - From Serial # K-3770 thru present; from BX-1000, CA-1000 thru present.
- 26 - From Serial # K-3770 thru K-5009
- 27 - From Serial # K-5010 thru present, from BX-1000, CA-1000 thru present.
- 28 - No serial # info available - visually check value before ordering
- 29 - Prior to Serial # AF-1167 & AG-1046.
- 30 - From Serial # AF-1167 thru present, AG-1046 thru present.
- 31 - All Five diget Serial #'s; L-1000 thru L-1139.
- 32 - Serial # 37420 thru present; L-1000 thru L-1139.
- 33 - From Serial # L-1139 thru present.
- 34 - From Serial # L-1228 thru L-1342.
- 35 - From Serial # L-1342 thru present
- 36 - Prior to Serial # A-1500.
- 37 - From Serial # A-1500 thru present.
- 38 - From Serial # AN1875, AZ-1041 thru present.

- 39 - Back Cylinder from Serial # AJ-1000 thru present.
- 40 - From Serial # AJ-3090 thru present.
- 41 - From Serial # AJ-1000 thru AJ-3089, FE-1000 thru present.
- 42 - Single stage footswitch only
- 43 - From Serial # FE-1000 thru present.
- 44 - From Serial # AJ-1000 thru present.
- 45 - From Serial # AJ-1000 thru AJ-3143
- 46 - From Serial # AJ-3144 and FE-1000 thru present.
- 47 - Base from Serial # AJ-1000 thru AJ-1272 & Tilt from Serial # AJ-1000 thru AJ-1276..
- 48 - Base From Serial # AJ-1273 thru present, FE-1000 thru present.
- 49 - Tilt From Serial # AJ-1277 thru present FE-1000 thru present.
- 50 - Back cylinder AN-1000 to present, BY-1000 thru BY-2005, CA-1000 thru CA-1190, DF-1000 thru DF-2694. Foot cylinder all Serial #'s.
- 51 - From Serial # AN-3027 thru present.
- 52 - From Serial # AN-1000 thru AN3026; Serial #'s with prefixes BY, DF, EM, EN, DZ, EY, EZ, KK, KL & HK.
- 53 - From Serial # AN-1000 thru present; BY-1000 thru BY-2624; CA-1000 thru CA-1506; Serial #'s with prefixes DF, EM, EN, EY & EZ.
- 54 - From Serial # AN-1000 thru AN-1874; from BY-2006 thru present; from CA-1191 thru present; from DF-2695 thru present; EM-1000 thru present; EN-1000 thru present; EY-1000, EZ-1000, HK-1000 thru present.
- 55 - From Serial # AN-1874 thru present; BY-1000 thru BY-2005, CA-1000 thru CA-1190, DF-1000 thru DF-2694.
- 56 - From Serial # BY-2006, CA-1191, DF-2695, EM-1000, EN-1000, EY-1000, EZ-1000 and HK-1000 thru present.
- 57 - From Serial # GW-1000 thru GW-1160; GX-1000 thru GX-1043; JJ-1000 thru JJ-1129; JK-1000 thru JK-1004.
- 58 - From Serial # GY-1000 thru GY-1198; GZ-1000 thru GZ-1022; HA-1000 thru HA-1083; HC-1000 thru HC-1015; JL-1000 thru JL-1070; JM-1000 thru JM-1021.
- 59 - Foot Cylinder only.
- 60 - From Serial # HH-1000, HN-1000, KK-1000, KL-1000, V-2200 thru present.
- 61 - Foot Cylinder only from Serial # HH-1000, HN-1000, KK-1000, KL-1000, V-2200 thru present.
- 62 - All Serial #'s with prefixes HN, KK, KL and V.
- 63 - From Serial # AV-1000 thru present - Base and Tilt only.
- 64 - From Serial # AY-1000 thru present.
- 65 - From -001 thru -015 Serial Numbers BX, CA, K7002 thru present.
- 66 - From -001 thru -016 Serial Numbers prefixes BY, CA, DF, EM, EN, EY & EZ
- 67 - From -005 Serial # prefixes HL & V2200 thru present.
- 68 - From -001 thru -006 Serial # prefixes ER, KK, KL & V2200 thru present.
- 69 - From -001 thru -008 Serial # prefixes AV & DJ.
- 70 - From -001 Serial # prefix BM.
- 71 - From -001 thru -002 Serial Number prefix AY.
- 72 - From 37420 thru present; Serial # K, BX, CA.